



Thank you for purchasing this replacement ReplayTV upgrade drive. We've done everything possible to check and test this drive. All you have to do now is to swap the drive in your ReplayTV unit with this one.

WARNING: Opening your ReplayTV 4000 Chassis voids your warranty with Sonicblue.

WARNING: Make sure your ReplayTV box is **UNPLUGGED** before you perform this procedure. Even though it is turned off, the box is constantly powered.

WARNING: Make sure you discharge yourself of static electricity before you perform the swap. You can do this by touching the metal part of the chassis periodically.

Remove the chassis cover by removing the 3 screws from the back and 6 black screws from the sides. Carefully slide the cover away from the bottom.

Carefully disconnect the IDE cable and power cable from your current hard drive.

Remove the drive bracket/drive assembly by removing the 4 screws that hold the bracket to the chassis.

Remove the drive from the assembly by removing the 4 screws. Install the new drive and replace the screws.

Reattach the drive assembly to the chassis using the 4 screws your removed previously.

Reconnect the power and IDE cables. Replace the chassis cover and the 9 screws.

Reconnect the Ethernet cable. Make sure that all of the other connectors are reattached.

Plug the power back into the unit. The unit will temporarily power up as it reloads the software and picks up the IP Address. It will power down again.

Turn the unit back on and you should see the Welcome ReplayTV screen on your TV.

Run ReplayTV setup to update Channel and Connection Options as well as the Remote Control Codes. After the above is complete, your ReplayTV 4000 is ready for use.

Store your original drive for safekeeping. It will be useful should this drive fail.

If you have any problems, please contact us via e-mail at info@replaytivo.us or phone at 609-577-5527